

# WASTE & WATER TANK SENDERS

## SOLO NON INVASIVE, SELF-ADHESIVE

Our Non-Contact sensor consists of a pair of sensor foils which adhere to the outside wall of an HDPE plastic or fiberglass tank.

A sensor module is attached to the foils and outputs a voltage proportional to the fluid level in the tank.

Since they install on the outside of the tank, they install in a matter of minutes, require no special installation tools, and there is no risk of tank leaks as a result of sensor installation.

Can only be used with the Solo or Legacy gauges.

### Options:

Non-Contact Sensor Kit Ref: 9003

Solo F with Non-Contact Sensor (waste) Ref: 9006

Solo E with Non-Contact Sensor (water) Ref: 9009



**SOLO NON INVASIVE  
(Applied to tank)**

## PROFILE CAPACITIVE

Profile Capacitive is designed for use in metal tanks, wood-cored fiberglass tanks or plastic tanks.

This PVC rod style level sensor will not fail as it has no moving parts.

The sensor installs through a 1" BSP threaded hole in the top of the tank.

It has a power on light which is very useful for installation, when being read by the monitoring panel it will glow green telling you that its power is on.

These senders are particularly suitable for use in our Series C Yellow Waste Tanks.

They are only compatible with the Solo and Legacy Digital displays.

*A separate flange is available* Ref: 9012

### Stock held:

36" Cut to Length Sender Ref: 9005

24" Cut to Length Sender Ref: 9004



**CAPACITIVE ROD**

## TEK TANKS

The Old Stables, West End Farm, Upper Froyle, Alton, Hampshire GU34 4JR. England  
Tel: +44 (0)1420 520830 fax: +44 (0)1420 520840 email: [sales@tek-tanks.com](mailto:sales@tek-tanks.com)  
[www.tek-tanks.com](http://www.tek-tanks.com)

**TEK TANKS**  
Water Waste and Fuel