

STR1 & STR2 · TANK LEVEL SENDERS

Set up your sender in a few taps.

Connect, configure and calibrate your Simarine STR1 or STR2 radar tank level sender with the Simarine Connect app — from first pairing to advanced calibration.

TIP

If something doesn't respond as expected, simply relaunching the app fixes it about 95% of the time.

Before you start — download the free **Simarine Connect** app for your phone:

IPHONE & IPAD**App Store**


apps.apple.com/app/simarine-connect

ANDROID**Google Play**


play.google.com/store/apps/details?id=net.simarine.ble

FIRST-TIME SETUP

- 01** Enable Bluetooth, open the app and tap **Scan for devices**.
- 02** Grant the app Bluetooth permissions.
- 03** Tap your sender in the list, then tap **OK** to begin initial setup.
- 04** Set the name, height, units, volume and type — **height and volume are required**.
- 05** Tap the back arrow to confirm and return to the main screen.
- 06** Your sender is now configured and ready to use.

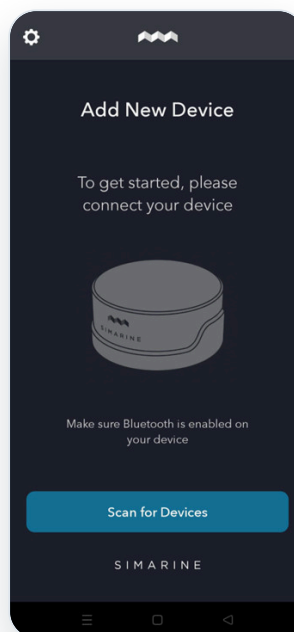**PHOTO 1**

Scan for devices

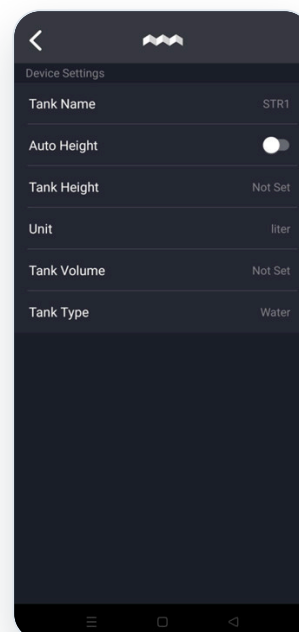**PHOTO 2**

Device settings

BASIC SETTINGS

- 01 Tap the **cogwheel** in the top-left corner to open the settings menu.
- 02 Set your **language** and **dark mode** preference.
- 03 Tap the back arrow to confirm and return to the main screen.

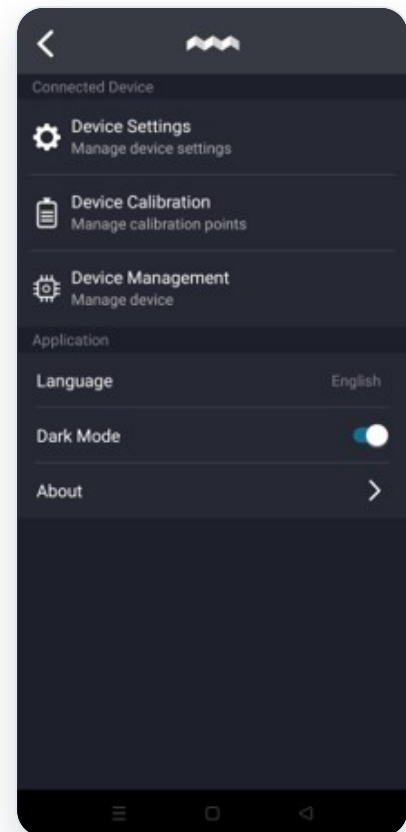


PHOTO 3
Settings menu

ADVANCED SETTINGS

Open the settings menu with the cogwheel (top-left). From there you can dive into three areas:

- 01 Device settings** — edit name, height, units and more (Photo 2).
- 02 Device calibration** — add calibration points to map tank volume to sensor readings.
- 03 Device management** — factory reset, firmware update, remove device, raw data, backup & restore.
- 04** Tap the back arrow to confirm and return to the main screen.

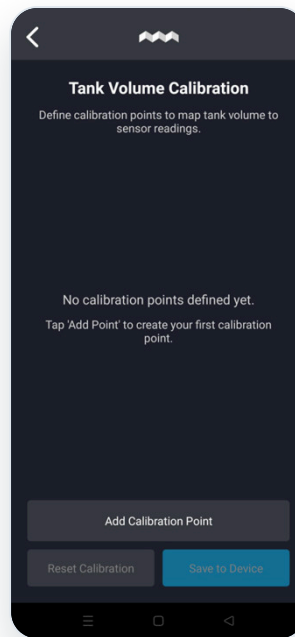


PHOTO 4

Device calibration

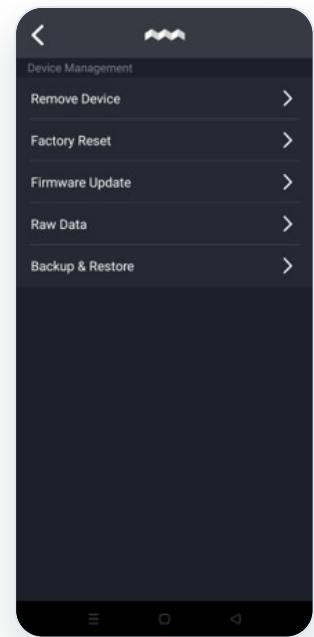


PHOTO 5

Device management

CHECK A SENDER FROM ANOTHER PHONE

- 01** Enable Bluetooth, open the app and tap the **plus (+)** button in the top-right corner, then scan for devices.
- 02** Grant the app Bluetooth permissions.
- 03** Tap your sender and enter the **passkey** to unlock access.

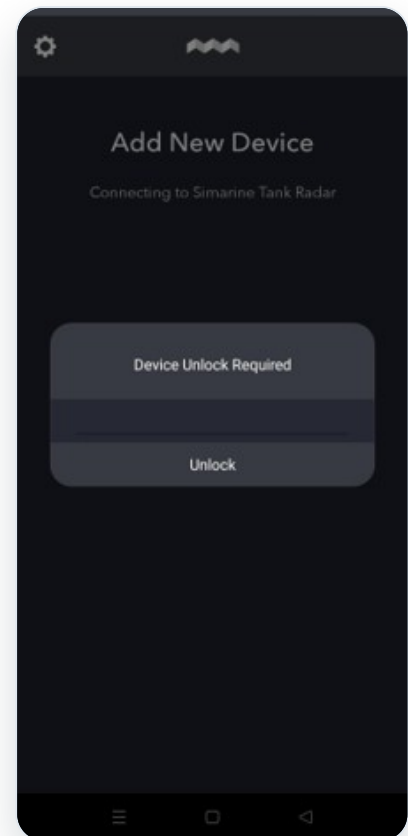


PHOTO 6
Unlock access